

# PARTS LIST

BC4320H-RS-01

## CONTENTS

1. MAIN BODY .....	1 ~ 2
2. GEARCASE.....	3 ~ 4
3. ENGINE.....	5 ~ 8
4. CARBURETOR, FUEL TANK .....	9 ~ 12
5. ACCESSORIES .....	13 ~ 14


2012. 11.



**MARUYAMA**


P/N 523498

1. BC4320H-RS-01  
MAIN BODY

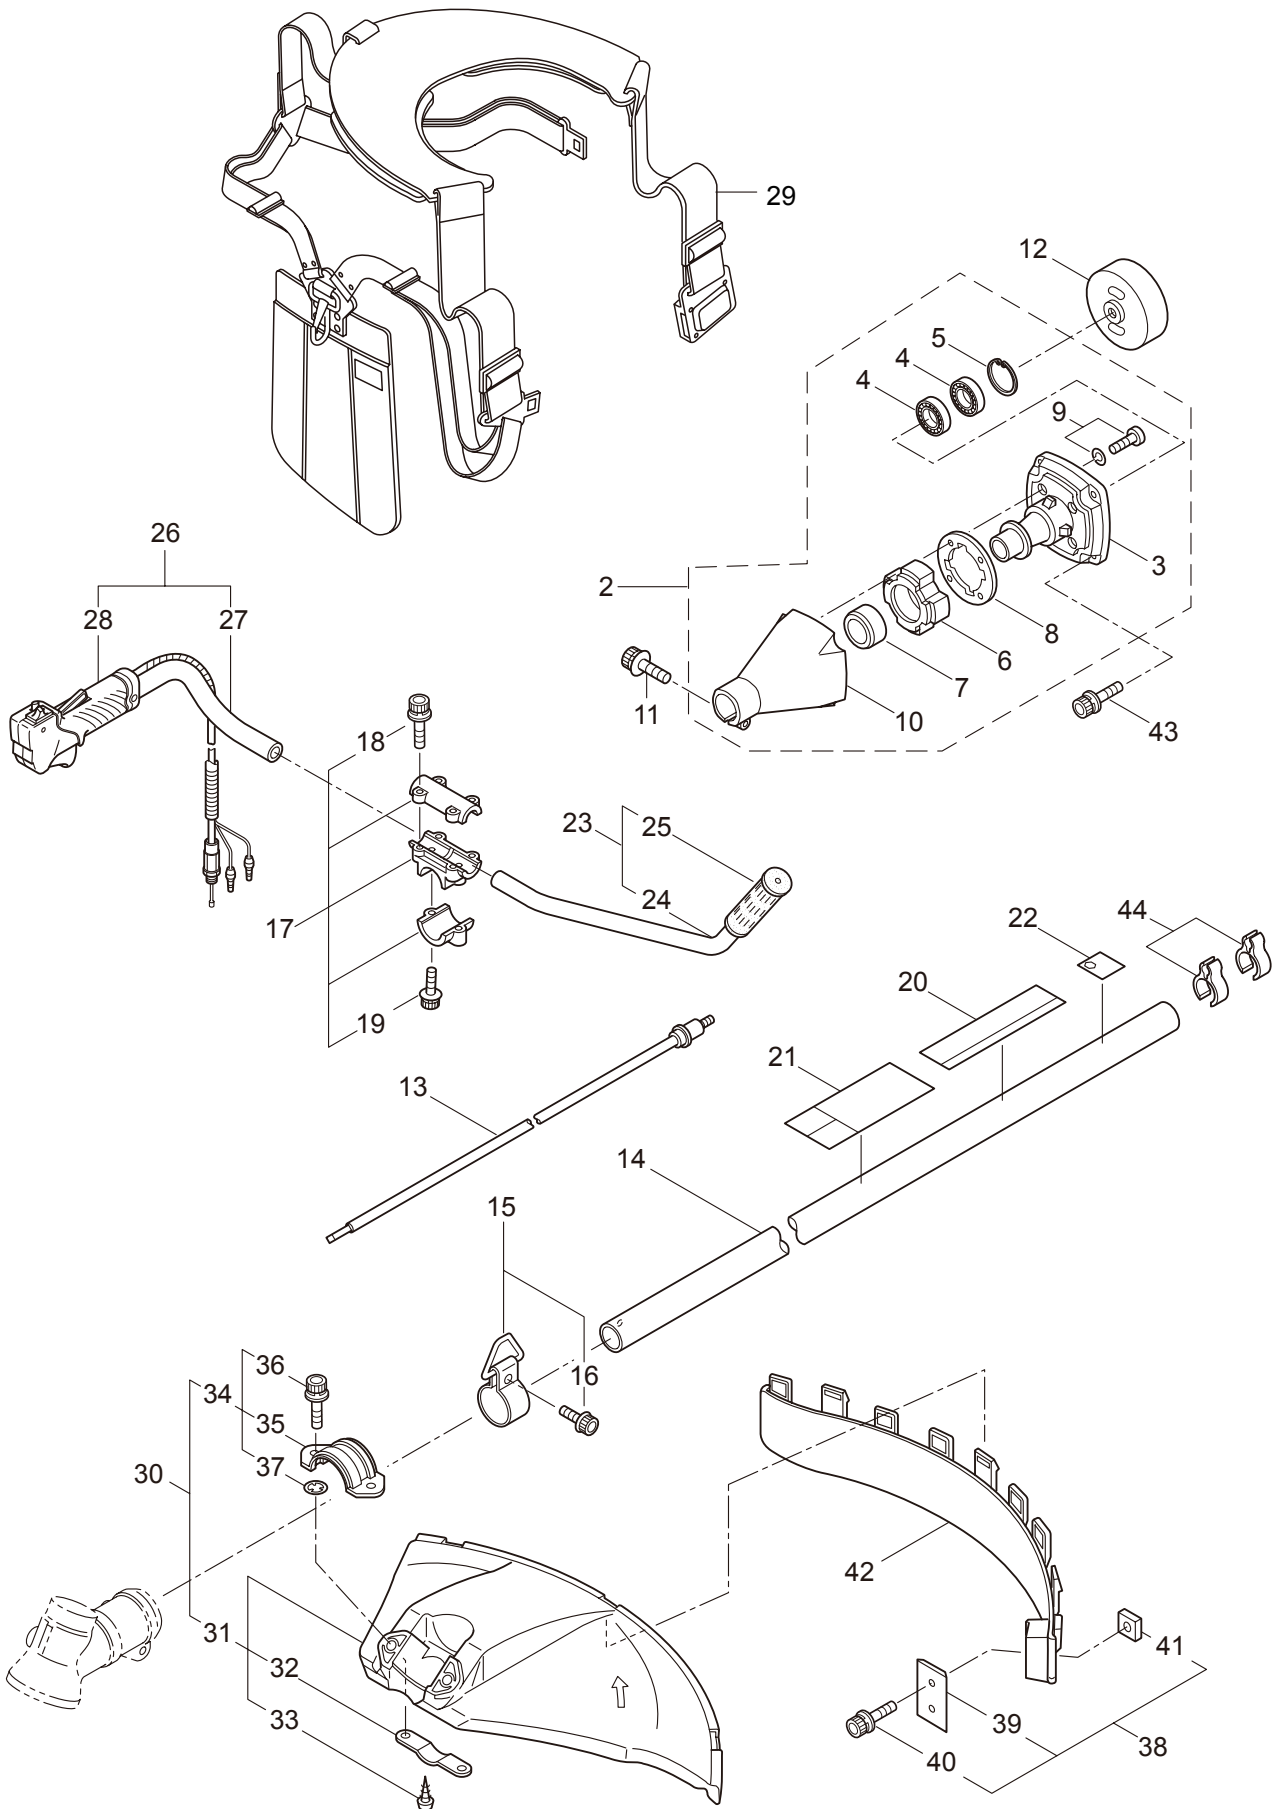


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	364119	BC4320H-RS-01	1	
1-2	234162	Clutch Case Ass'y	1	Incl.3-10
1-3	234143	Bearing Case	1	
1-4	140474	Bearing	2	#6202ZZ
1-5	012380	Snap Ring	1	#35
1-6	217045	Buffer (A)	1	
1-7	217046	Buffer (B)	1	
1-8	217047	Washer	1	
1-9	092033	Screw	4	M5x15
1-10	227728	Driveshaft Tube Adapter	1	
1-11	217134	Bolt	1	M6x30
1-12	211203	Clutch Drum	1	
1-13	217897	Driveshaft Ass'y	1	
1-14	217900	Driveshaft Tube	1	
1-15	231887	Hanging Bracket Ass'y	1	Incl.16
1-16	261762	Cap Screw	1	M5x14
1-17	231888	Bracket Ass'y	1	Incl.18,19
1-18	217138	Bolt	4	M6x25
1-19	217134	Bolt	2	M6x30
1-20	228333	Label	1	BC4320H-RS
1-21	223188	Label	1	
1-22	228207	Label	1	
1-23	228398	Handle Ass'y-Left	1	Incl.24,25
1-24	228399	Handle (A)	1	
1-25	226512	Grip	1	
1-26	229762	Handle Ass'y-Right	1	Incl.27,28
1-27	228401	Handle (B)	1	
1-28	229763	Throttle Trigger	1	
1-29	228086	Hanging Strap Ass'y	1	
1-30	232092	Safety Cover Ass'y	1	Incl.31-37
1-31	231262	Safety Cover Ass'y	1	Incl.32,33
1-32	223180	Threaded Bracket	1	
1-33	221580	Screw	1	4x8
1-34	232093	Bracket Ass'y	1	Incl.35-37
1-35	223179	Bracket	1	
1-36	220632	Cap Screw	2	M6x30
1-37	231704	Washer	2	6x13xt1.0
1-38	231882	String Cutter Ass'y	1	Incl.39-41
1-39	230747	String Cutter	1	
1-40	261250	Cap Screw	1	M5x20
1-41	228325	Nut	1	
1-42	230748	Cover Extention	1	
1-43	219113	Cap Screw	4	M6x20
1-44	219161	Wire Guide	2	

2. BC4320H-RS-01  
GEARCASE

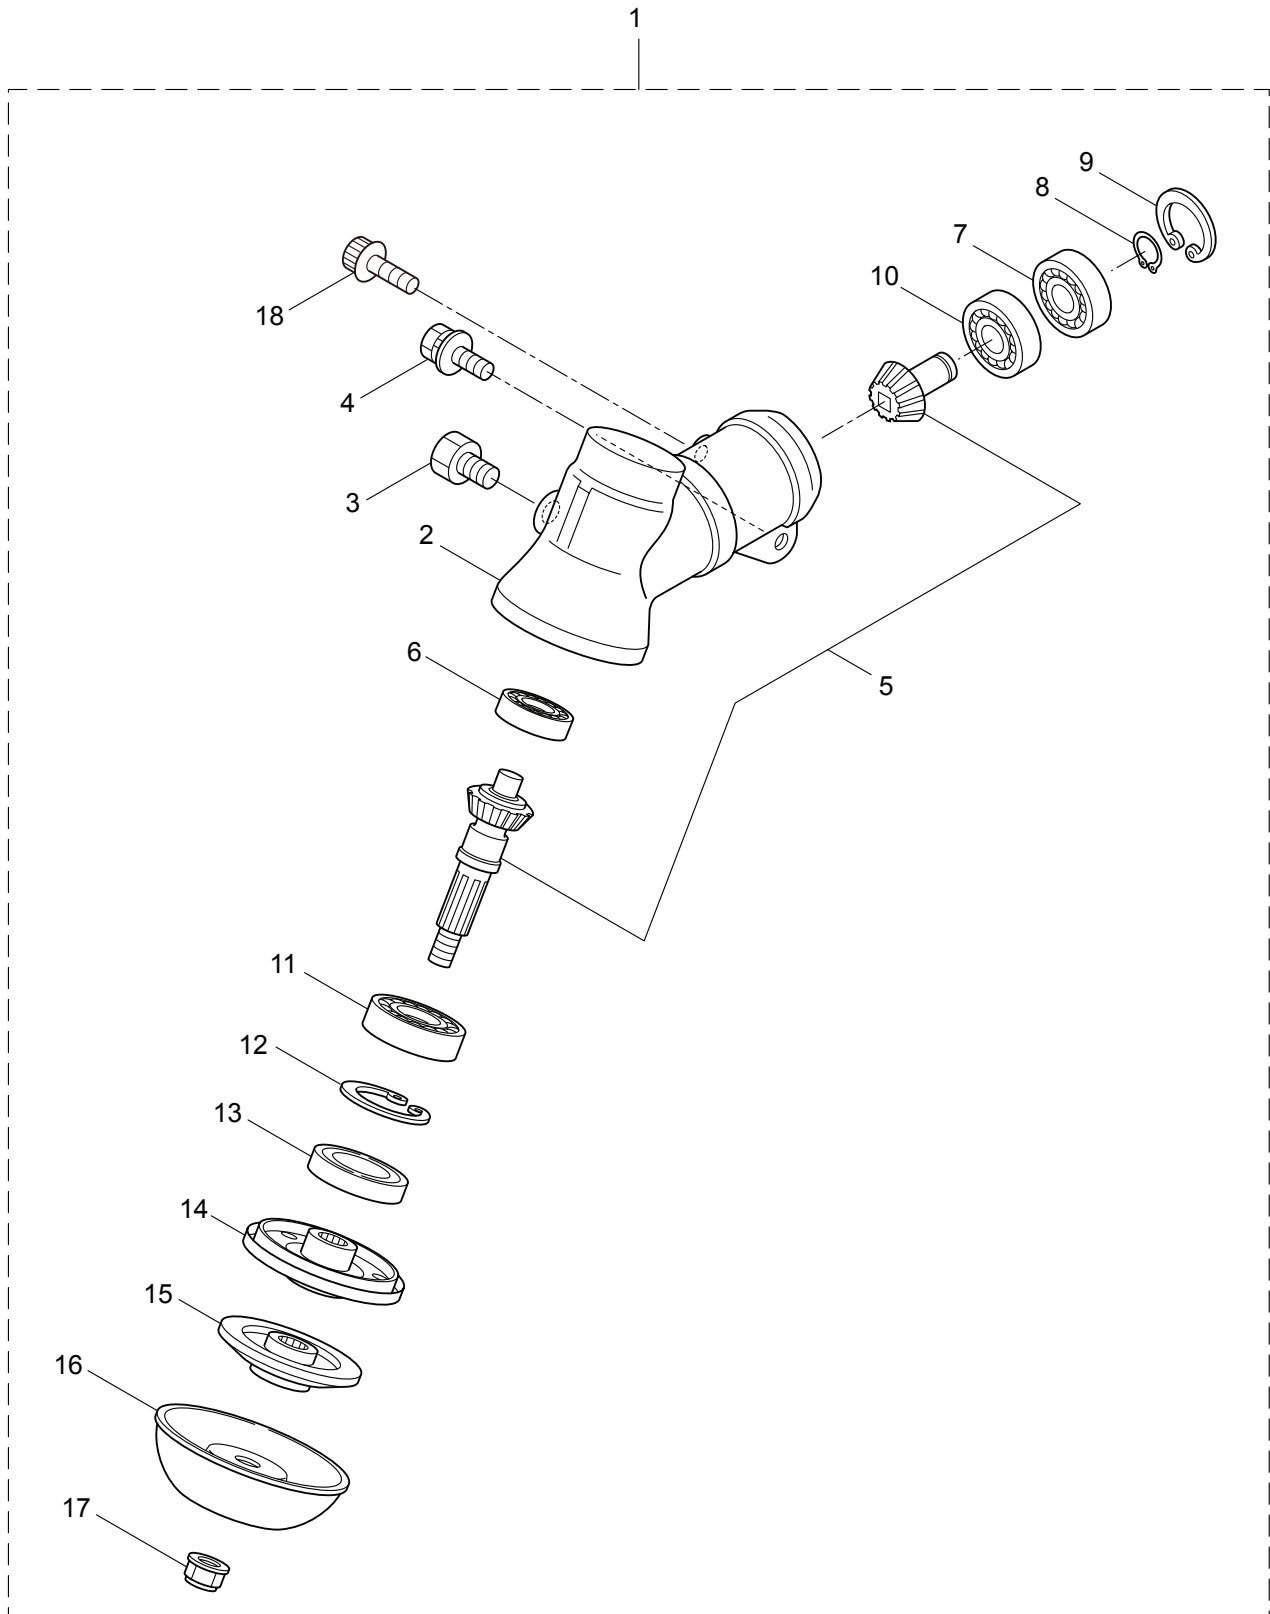


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	234835	Gearcase Ass'y	1	Incl.2-18
2-2	232833	Gearcase	1	
2-3	234109	Bolt	1	M8x8
2-4	217134	Bolt	1	M6x30
2-5	234349	Gear Set	1	
2-6	014490	Bearing	1	#6000
2-7	106933	Bearing	1	#6000Z
2-8	014210	Snap Ring	1	#10
2-9	054676	Snap Ring	1	#26
2-10	014490	Bearing	1	#6000
2-11	012544	Bearing	1	#6202
2-12	012380	Snap Ring	1	#35
2-13	232049	Oil Seal	1	D21355
2-14	232322	Bracket A Ass'y	1	
2-15	232052	Bracket B	1	
2-16	230849	Stabilizer	1	
2-17	232920	Nut	1	M10x1.25
2-18	217135	Bolt	1	M6x10

3. BC4320H-RS-01  
ENGINE

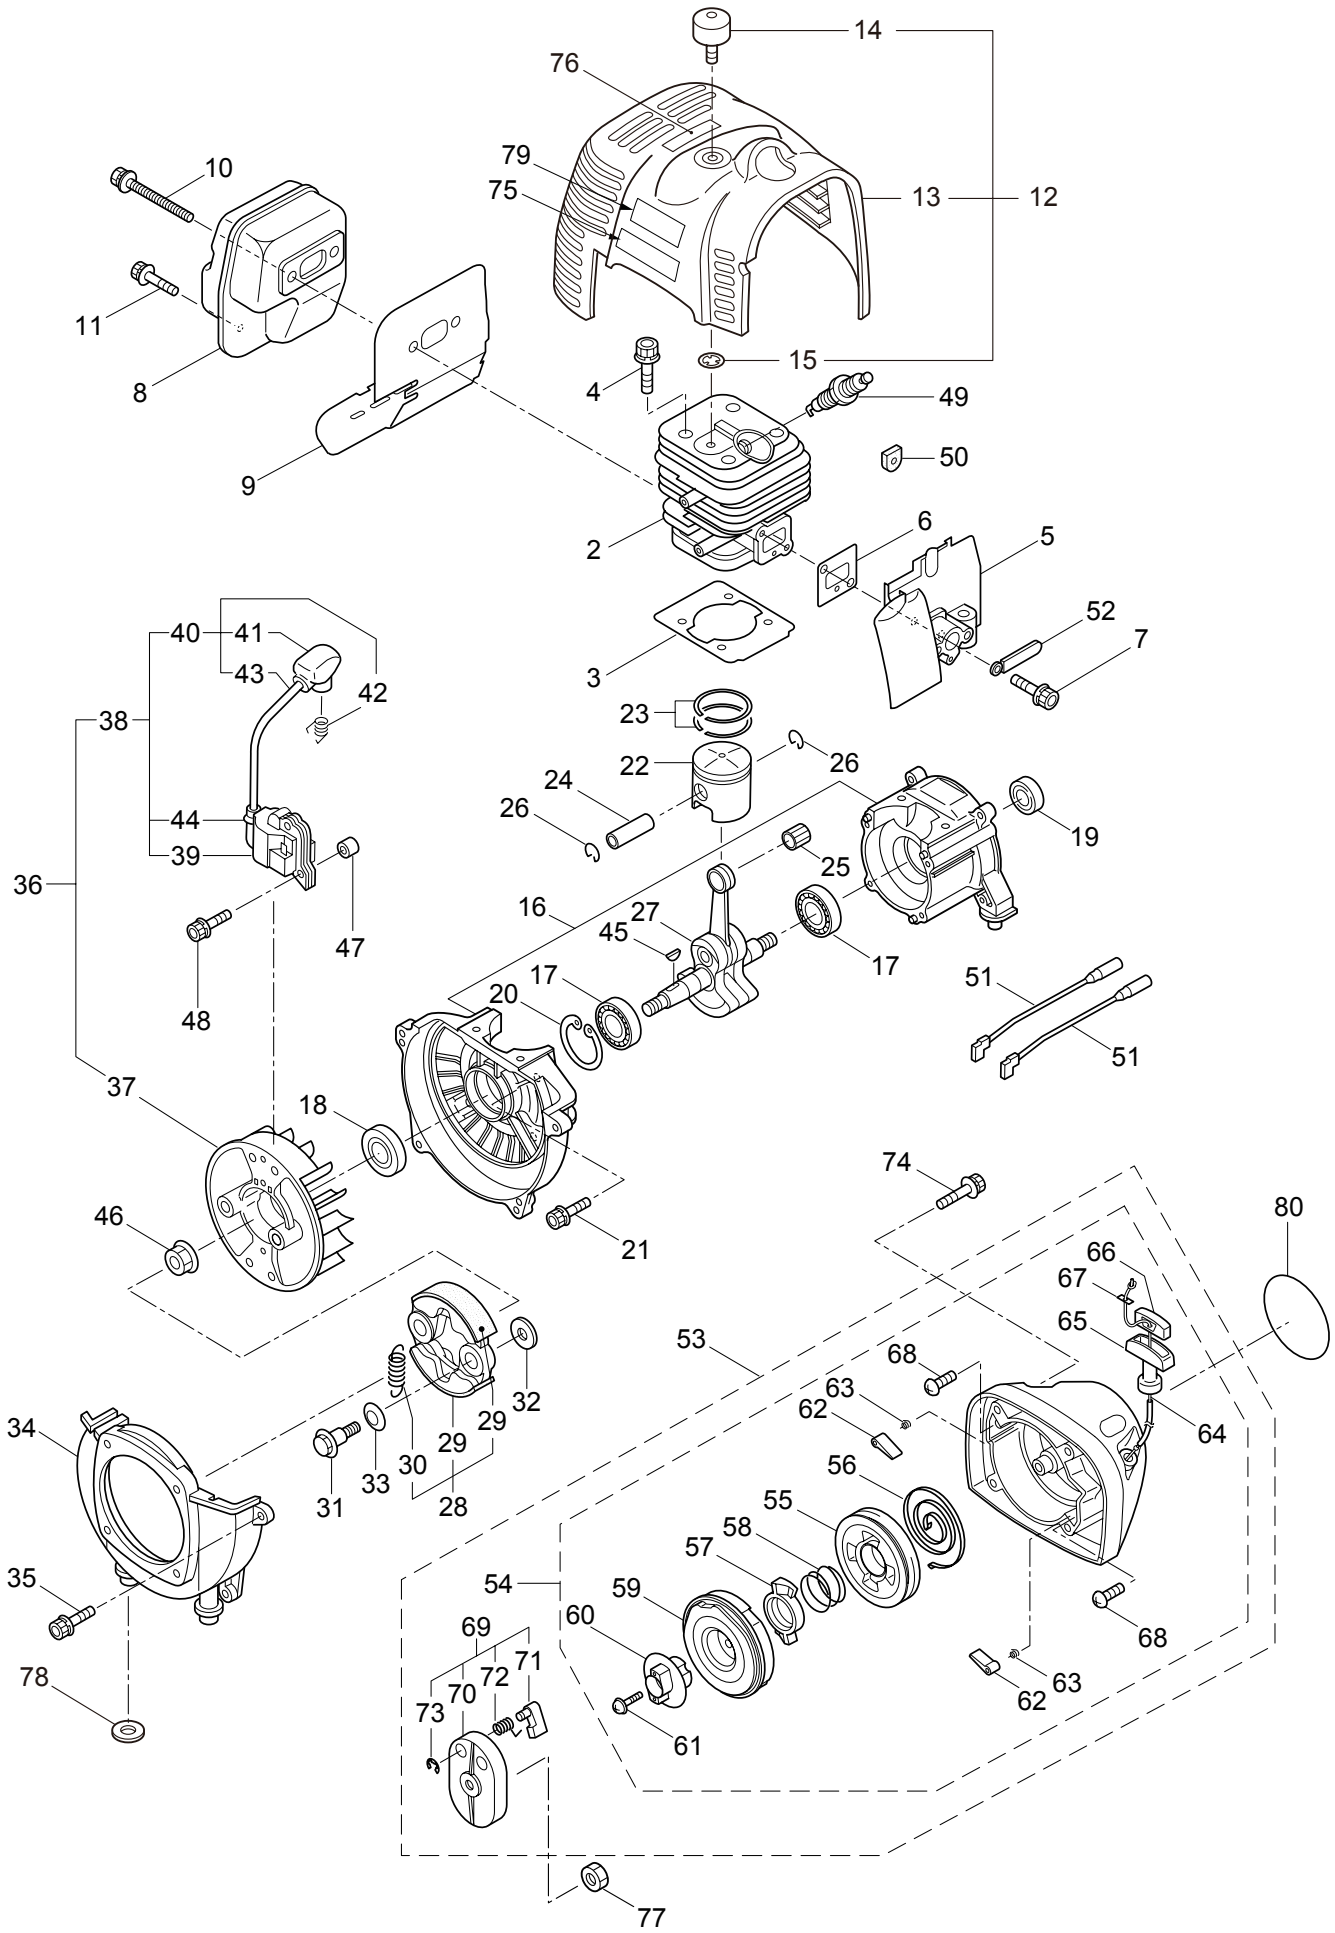

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858297	Engine	1	NE420/13
3-2	282257	Cylinder	1	New gasket required
3-3	282259	Gasket	1	
3-4	261612	Cap Screw	4	M5x30
3-5	282261	Insulator	1	New gasket required
3-6	282262	Gasket	1	
3-7	267290	Cap Screw	2	M5x20
3-8	282264	Muffler Comp.	1	
3-9	282271	Gasket	1	
3-10	266713	Cap Screw	2	M5x60
3-11	283315	Screw	1	M5x12W-12
3-12	286390	Top Cover Ass'y	1	Incl.13-15
3-13	282274	Top Cover	1	
3-14	285843	Knob	1	
3-15	286362	Washer	1	M6
3-16	282277	Crankcase	1	
3-17	262658	Bearing	2	#6202C3
3-18	262660	Oil Seal	1	TC15357
3-19	262565	Oil Seal	1	ISCD15257
3-20	012380	Snap Ring	1	#35
3-21	261612	Cap Screw	4	M5x30
3-22	265227	Piston	1	
3-23	262476	Piston Ring	2	(2)Required
3-24	262749	Piston Pin	1	
3-25	262659	Bearing,Needle	1	KTV111414EG01B2
3-26	262479	Clip,Piston Pin	2	
3-27	283038	Crankshaft/Conn.Rod Ass'y	1	
3-28	282743	Clutch Ass'y	1	Incl.29,30
3-29	282624	Clutch Shoe	2	(2)required
3-30	263617	Spring,Clutch	1	2.3-44.8L
3-31	282321	Cap Screw	2	M8x1.25
3-32	262683	Washer	2	8x22xt1.2
3-33	262682	Wave Washer	2	
3-34	282285	Fan Cover	1	
3-35	261250	Cap Screw	4	M5x20
3-36	282287	Magneto Ass'y	1	Incl.37-44
3-37	282288	Rotor/Fan	1	
3-38	282289	Ignition Coil Ass'y	1	Incl.39-44
3-39	267572	Coil	1	
3-40	282290	Spark Plug Wire Ass'y	1	Incl.41-43
3-41	282292	Plug Boot	1	
3-42	261075	Connector	1	
3-43	282291	Spark Plug Wire	1	
3-44	261072	Cap	1	
3-45	261076	Woodruff Key	1	3x10


3. BC4320H-RS-01  
ENGINE

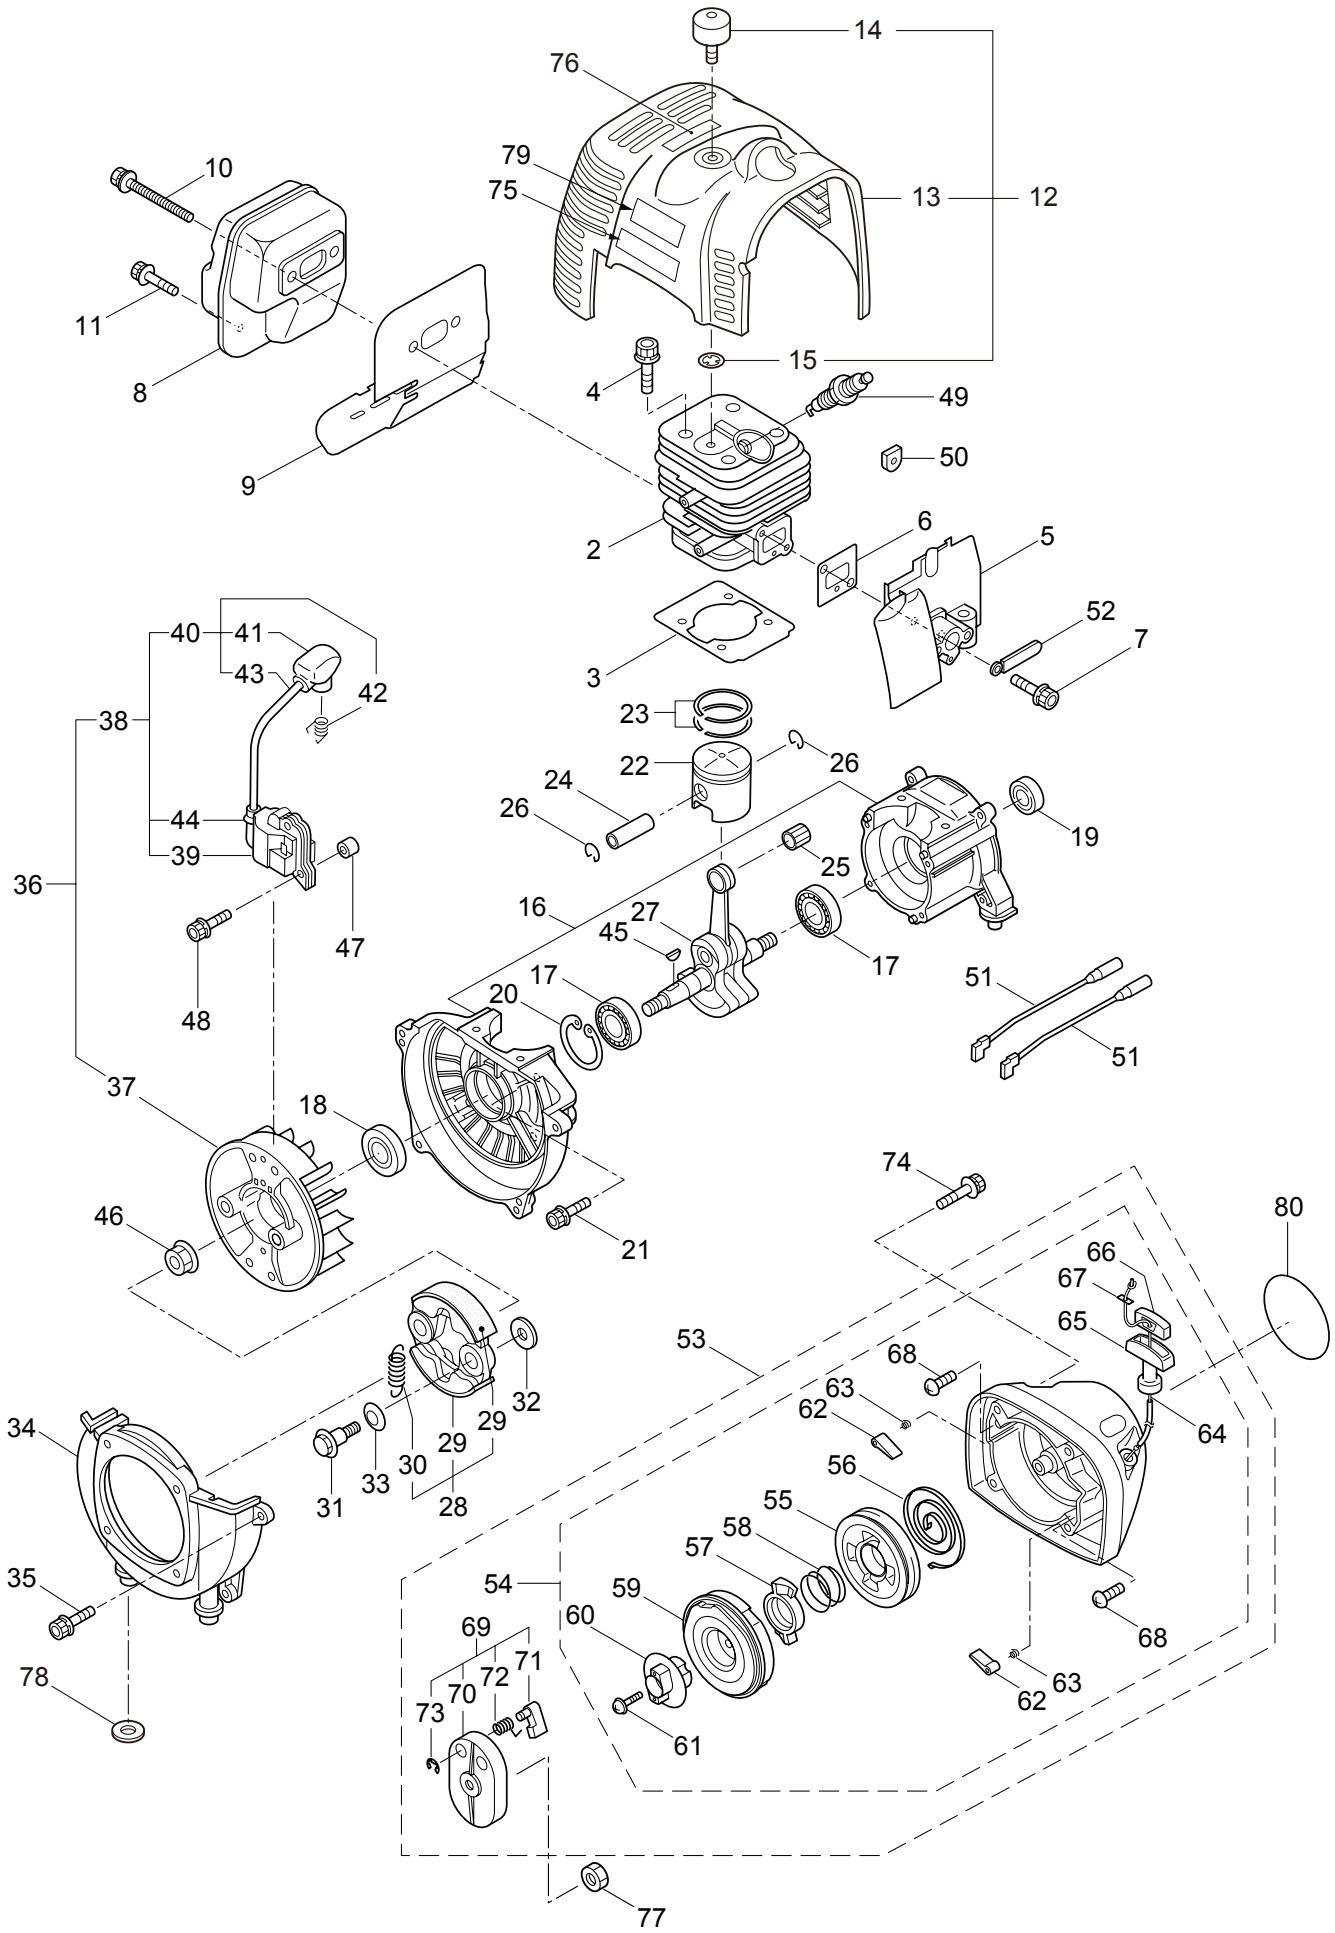




Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	262731	Nut,Rotor	1	M10
3-47	280381	Spacer	2	
3-48	261256	Cap Screw	2	M4x25
3-49	262483	Spark Plug	1	NGK BPMR6Y
3-50	281172	Grommet	1	
3-51	267492	Lead	2	130L
3-52	264588	Clamp	1	
3-53	282294	Recoil Starter Ass'y	1	Incl.54-73
3-54	282295	Starter Ass'y	1	Incl.55-68
3-55	280994	Pulley	1	
3-56	280995	Spiral Spring	1	
3-57	280996	Pawl	1	
3-58	280997	Return Spring	1	
3-59	283123	Spring Comp.	1	
3-60	280999	Plate	1	
3-61	281000	Set Screw	1	
3-62	281001	Pawl	2	
3-63	281002	Return Spring	2	
3-64	281004	Starter Rope	1	
3-65	262633	Starter Grip	1	
3-66	262981	Cap	1	
3-67	281005	Rope Stopper	1	
3-68	282622	Screw	2	
3-69	282623	Starter Pulley Ass'y	1	Incl.70-73
3-70	282282	Starter Pulley	1	
3-71	262636	Pawl	2	
3-72	262637	Return Spring	2	
3-73	262638	E-Ring	2	
3-74	261607	Cap Screw	4	M5x16
3-75	262714	Label	1	MARUYAMA
3-76	267561	Label	1	
3-77	126990	Nut	1	M8
3-78	285735	Packing	4	
3-79	265694	Label	1	
3-80	283135	Label	1	REVERSE2/NE420

4. BC4320H-RS-01  
 CARBURETOR, FUEL TANK

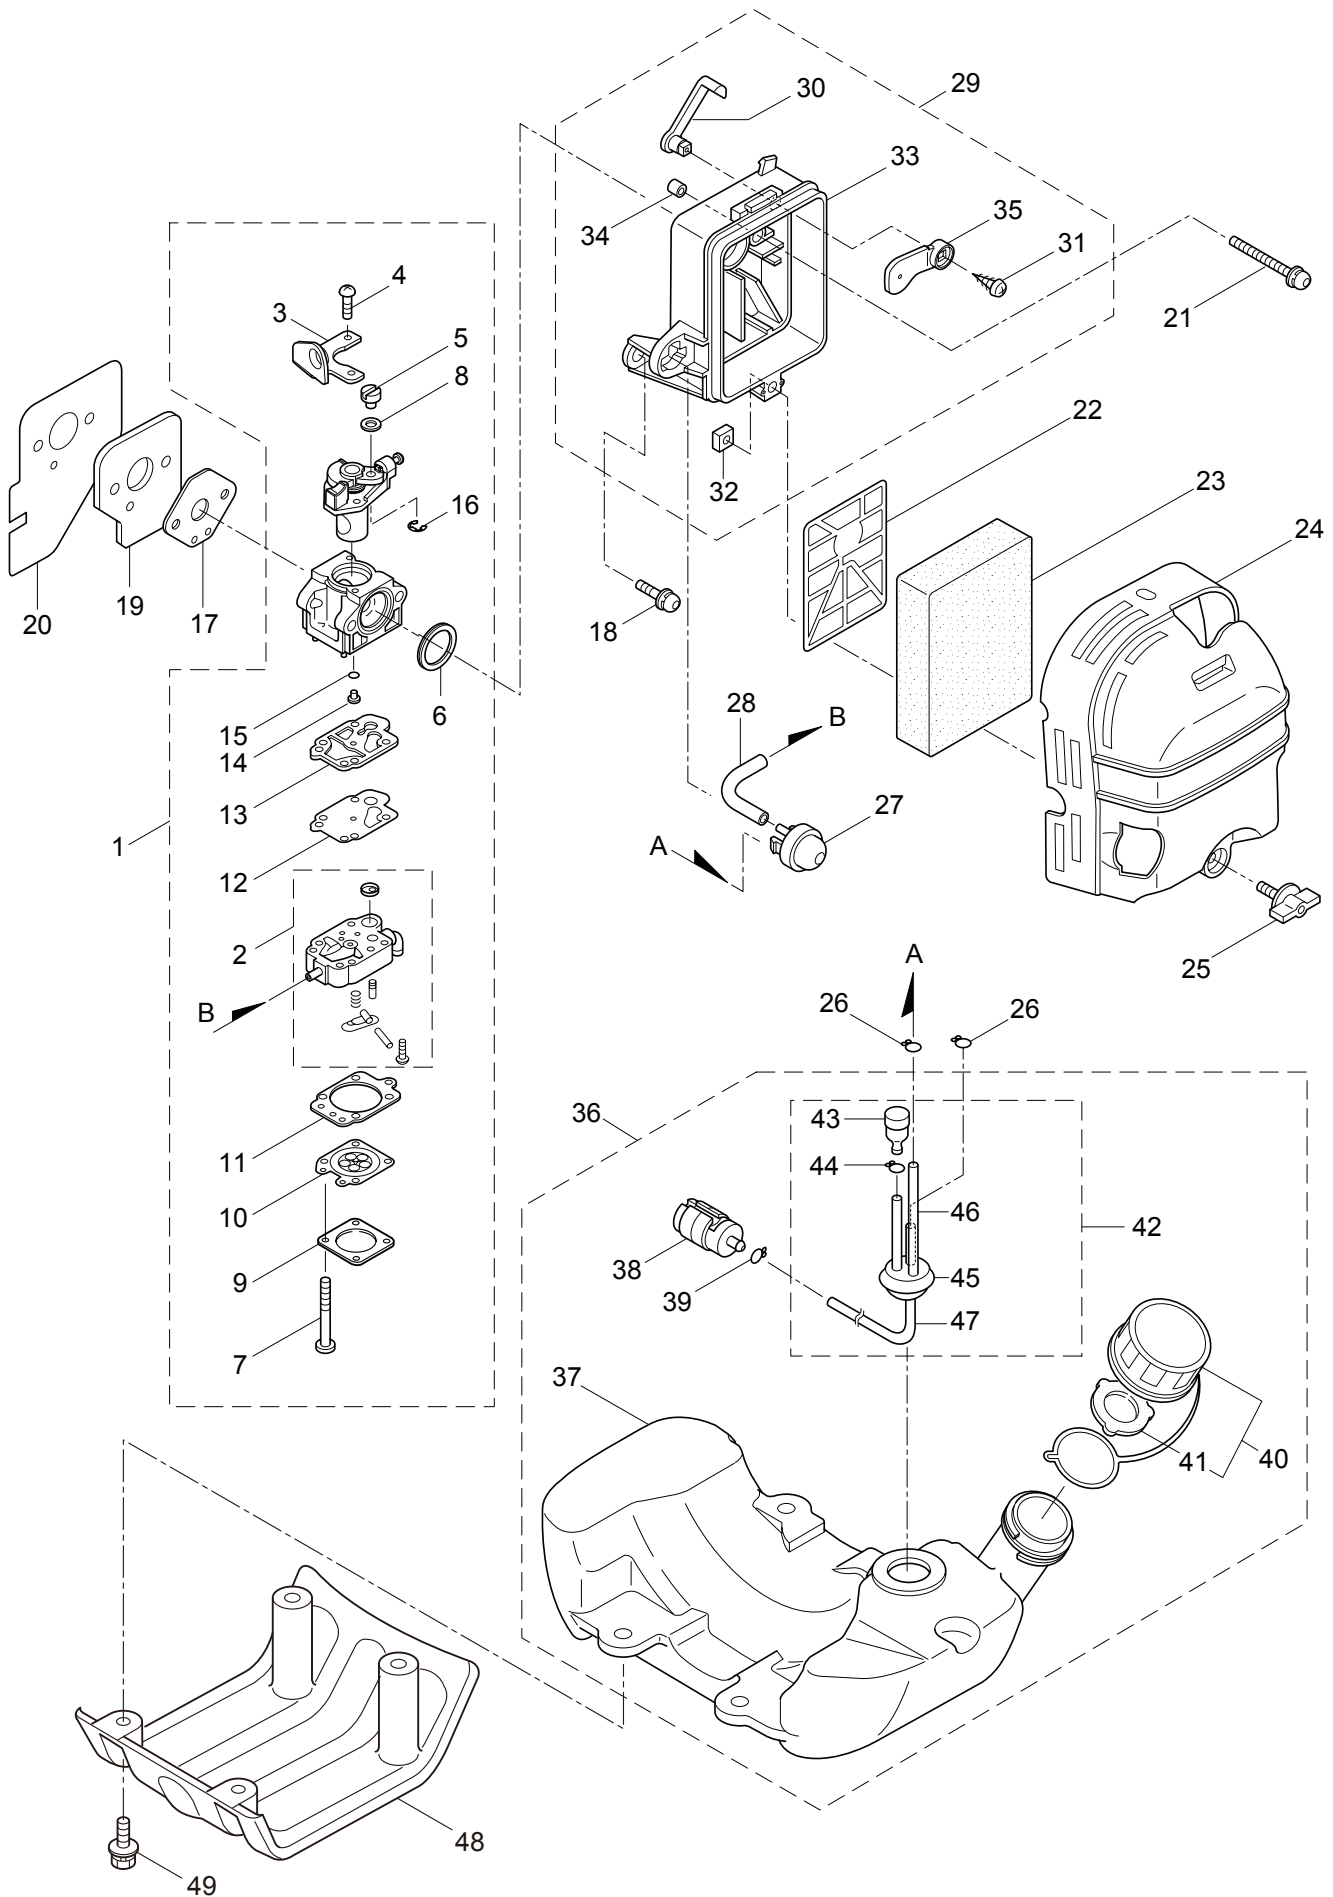












Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	284109	Carburetor Ass'y	1	Incl.2-16 New gasket required
4-2	283124	Pump Body	1	
4-3	264677	Bracket	1	
4-4	261875	Screw	2	
4-5	261658	Swivel	1	
4-6	261657	Packing	1	
4-7	263737	Screw	4	
4-8	264678	Washer	1	
4-9	263726	Cover Plate	1	
4-10	283905	Diaphragm, Meterring	1	
4-11	263727	Gasket	1	
4-12	262994	Diaphragm,Fuel Pump	1	
4-13	282576	Gasket	1	
4-14	283125	Main Jet	1	
4-15	261871	O-Ring	1	
4-16	261876	E-Ring	1	
4-17	282301	Gasket	1	
4-18	264807	Cap Screw	1	M5x16
4-19	283086	Divider	1	
4-20	283087	Gasket	1	
4-21	262720	Cap Screw	2	M5x55
4-22	282481	Plate	1	
4-23	282306	Element	1	
4-24	282307	Cleaner Cover	1	
4-25	281438	Knob	1	
4-26	261117	Clip	2	
4-27	282299	Pump	1	
4-28	282512	Fuel Pipe	1	
4-29	282302	Case Ass'y	1	Incl.30-35
4-30	282305	Lever	1	
4-31	269032	Screw	1	
4-32	269423	Nut	1	
4-33	282303	Case Body	1	
4-34	282484	Sleeve	3	
4-35	282304	Valve	1	
4-36	282309	Fuel Tank Ass'y	1	Incl.37-47
4-37	282310	Fuel Tank	1	
4-38	267328	Fuel Filter Ass'y	1	
4-39	261117	Clip	1	
4-40	281564	Fuel Tank Cap Ass'y	1	Incl.41
4-41	269377	Gasket	1	
4-42	282312	Fuel Pipe Ass'y	1	Incl.43-47
4-43	261590	Breather	1	
4-44	261117	Clip	1	
4-45	268065	Grommet	1	

4. BC4320H-RS-01  
 CARBURETOR, FUEL TANK

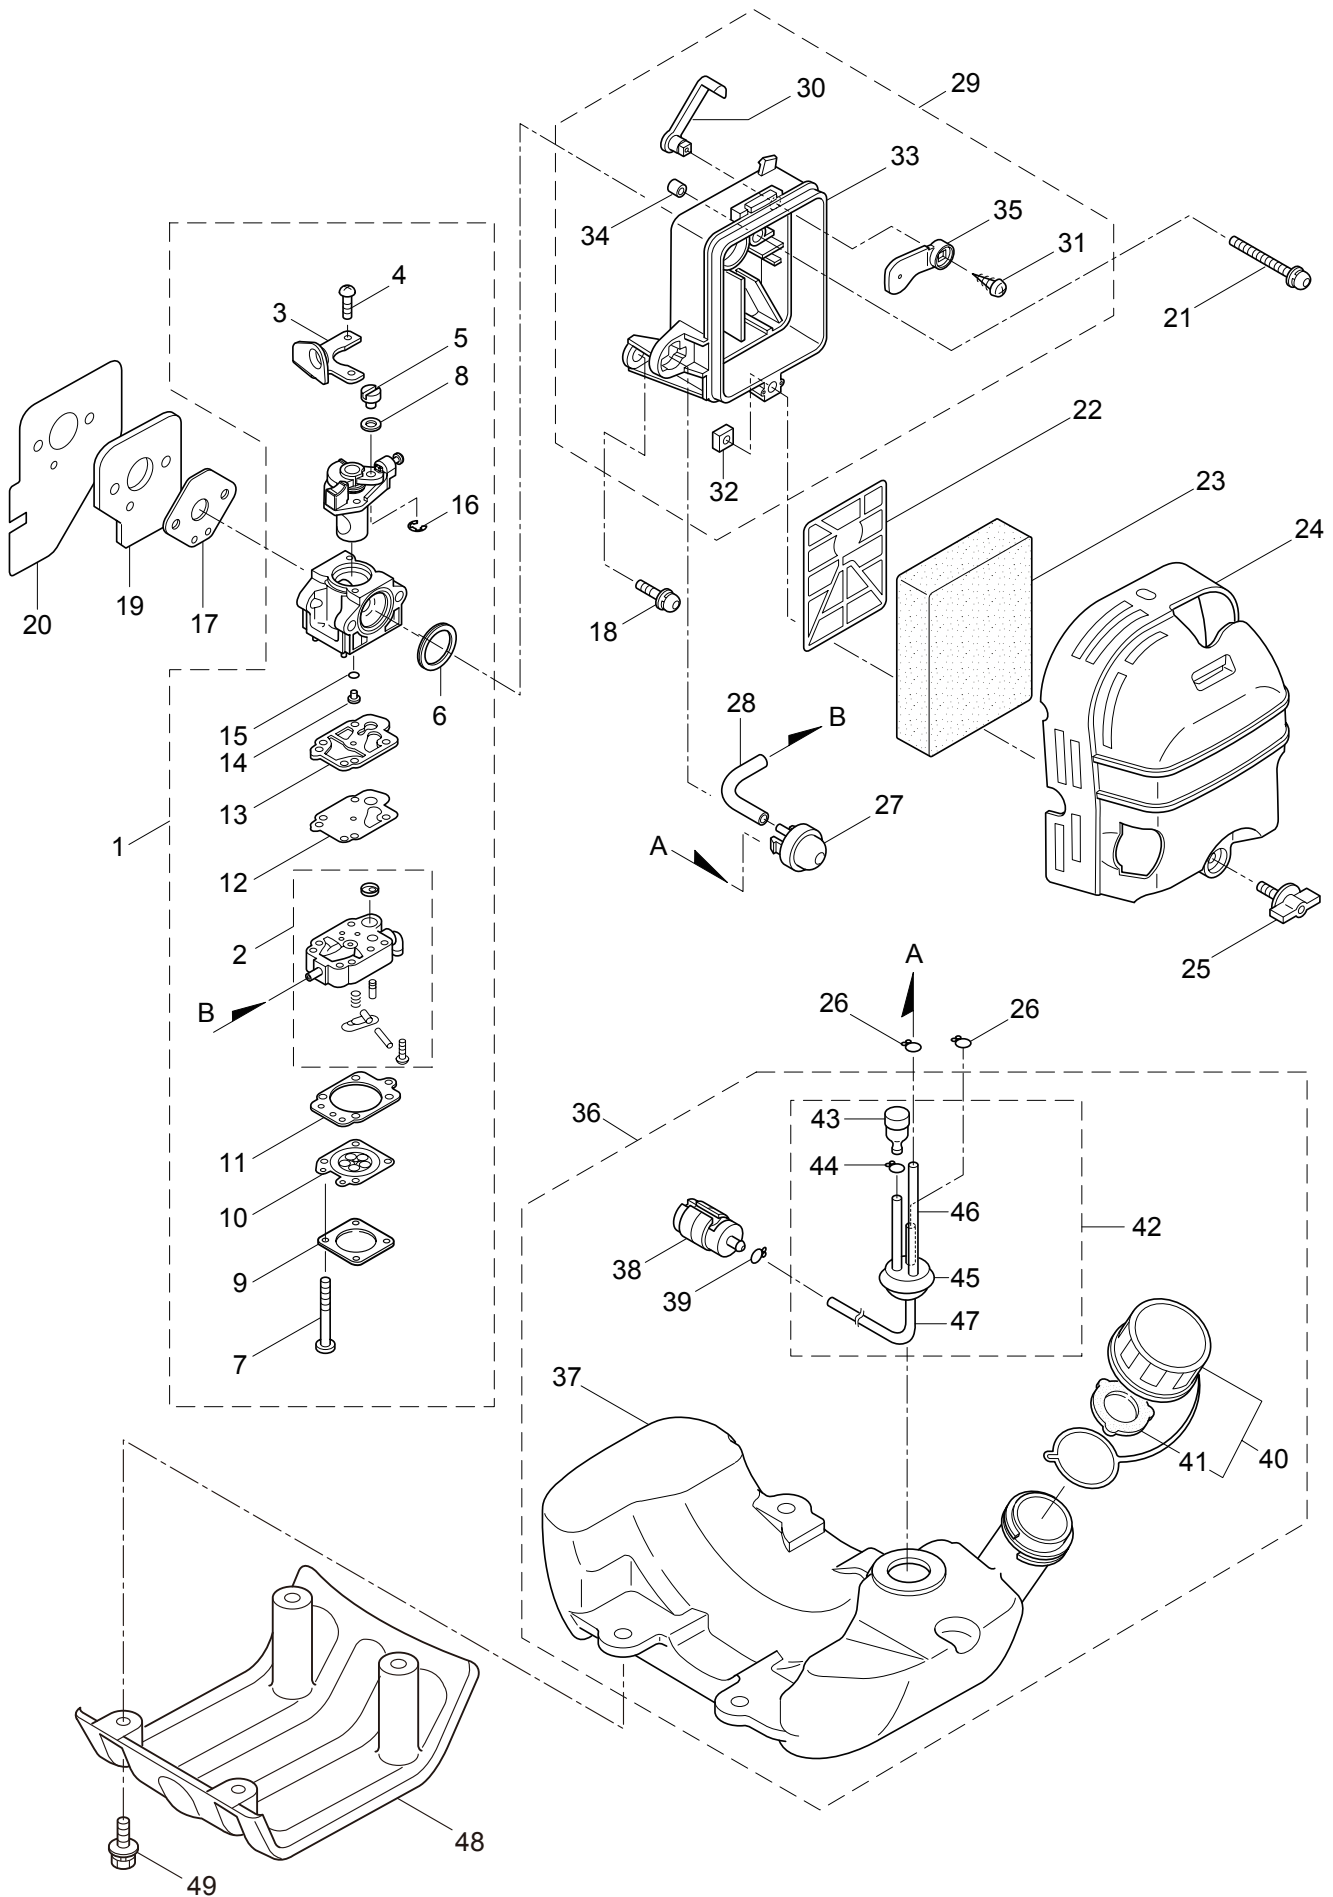

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	282511	Return Pipe	1	
4-47	262649	Fuel Pipe	1	
4-48	285757	Stand	1	
4-49	281714	Cap Screw	4	M5x20

5. BC4320H-RS-01  
ACCESSORIES

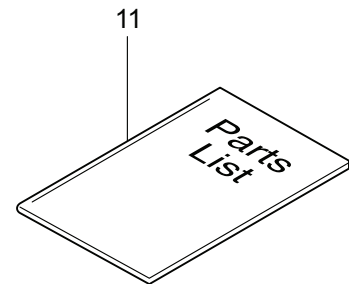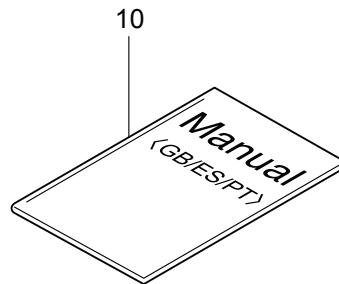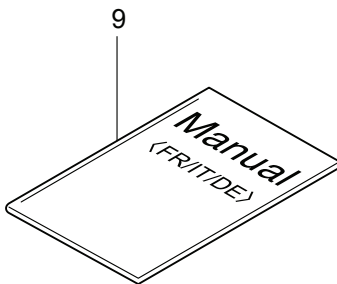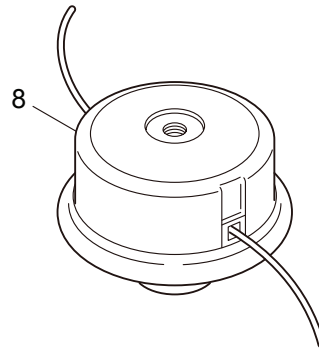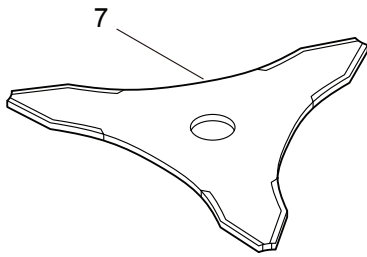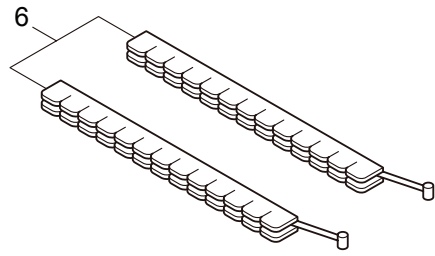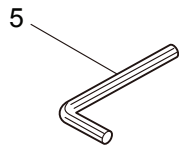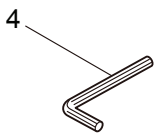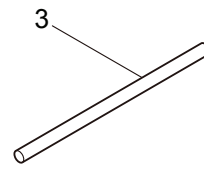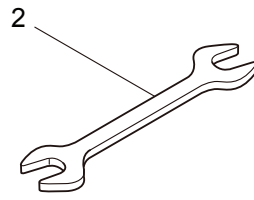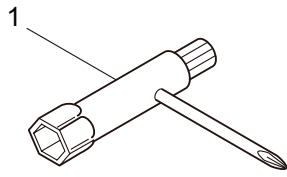

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	228008	Box Spanner	1	
5-2	054756	Double-ended Wrench	1	10x13
5-3	212300	Lever Handle	1	6X100L
5-4	219432	Wrench	1	4mm
5-5	219433	Wrench	1	5mm
5-6	220534	Blade Cover	1	
5-7	227910	3-Teeth Blade	1	
5-8	234860	Nylon Head (L) 5	1	
5-9	233326	Instruction Manual	1	FR/IT/DE
5-10	233234	Instruction Manual	1	GB/ES/PT
5-11	523498	Parts List	1	BC4320H-RS-01