

PARTS LIST

BC320H-RS

CONTENTS


1. MAIN BODY	1 ~ 2
2. GEARCASE.....	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 10

2009. 02.










P/N 522734

1. BC320H-RS
MAIN BODY

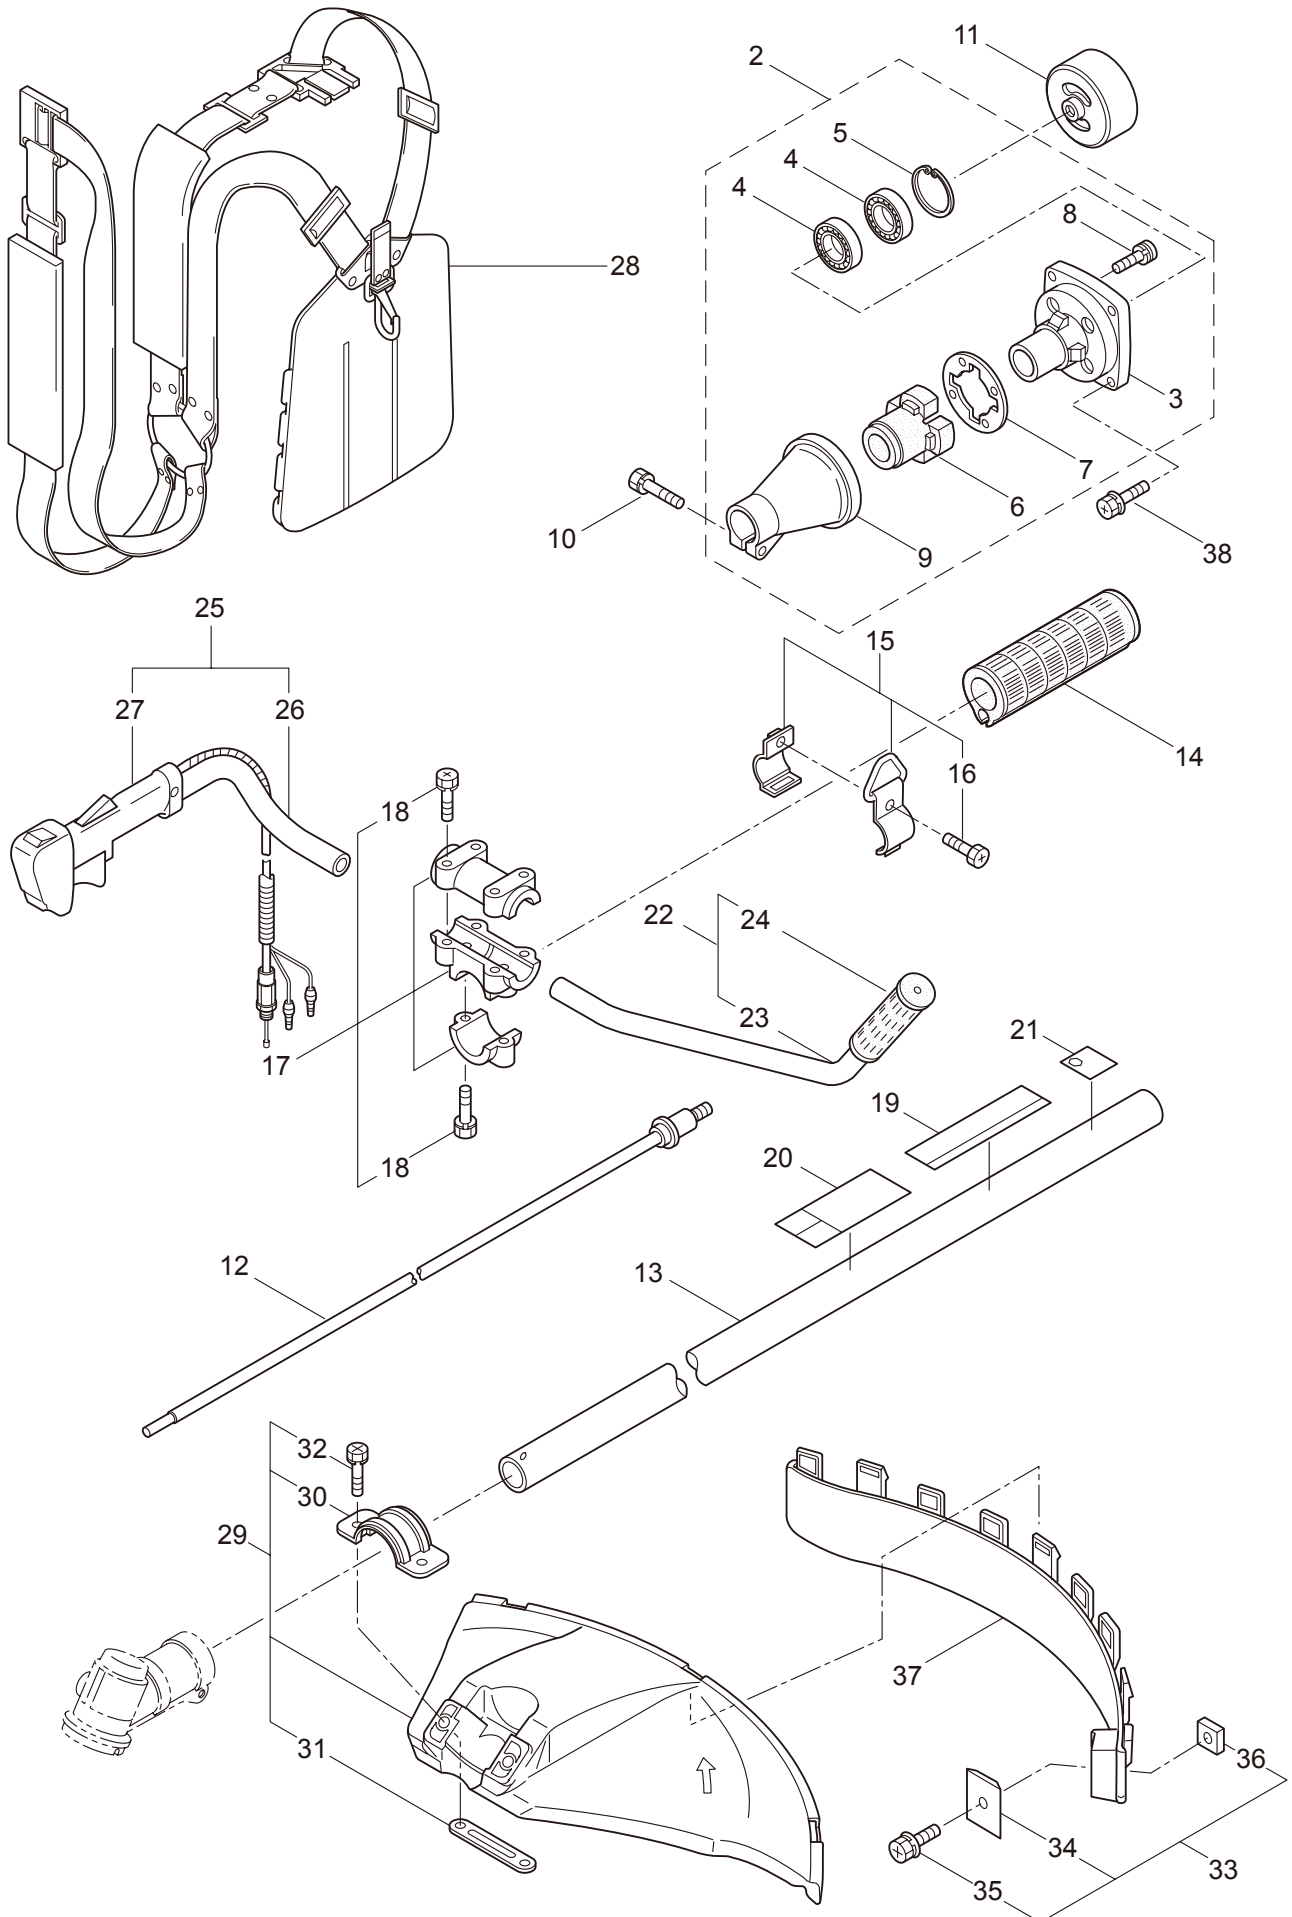


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	363585	BC320H-RS	1	
1-2	215512	Clutch Case Ass'y	1	Incl.3-9
1-3	214592	Bearing Case	1	
1-4	214161	Bearing	2	#6000ZZ
1-5	054676	Snap Ring	1	#26
1-6	214162	Buffer	1	
1-7	214163	Washer	1	
1-8	092033	Screw	4	M5x15
1-9	214593	Driveshaft Tube Adapter	1	
1-10	092561	Bolt	1	M5x25
1-11	054677	Clutch Drum	1	
1-12	219268	Driveshaft Ass'y	1	
1-13	218711	Driveshaft Tube	1	
1-14	215532	Shaft Grip	1	
1-15	054691	Hanging Bracket Ass'y	1	Incl.16
1-16	089738	Bolt	1	M5x15
1-17	215418	Bracket Ass'y	1	Incl.18
1-18	092561	Bolt	6	M5x25
1-19	226522	Label	1	BC320H-RS
1-20	223188	Label	1	
1-21	228043	Label	1	
1-22	226501	Handle Ass'y-Left	1	Incl.23,24
1-23	226502	Handle	1	
1-24	226503	Grip	1	
1-25	229071	Handle Ass'y-Right	1	Incl.26,27
1-26	223714	Handle	1	
1-27	229004	Throttle Trigger	1	
1-28	219612	Hanging Strap Ass'y	1	
1-29	228302	Safety Cover Ass'y	1	Incl.30-32
1-30	227822	Bracket	1	
1-31	227819	Bracket	1	
1-32	092555	Bolt	2	M6x30
1-33	228301	Code Cutter Ass'y	1	Incl.34-36
1-34	227823	Code Cutter	1	
1-35	817002	Bolt	1	M5x20
1-36	228325	Nut	1	
1-37	227812	Extension	1	
1-38	817002	Bolt	4	M5x20

2. BC320H-RS GEARCASE

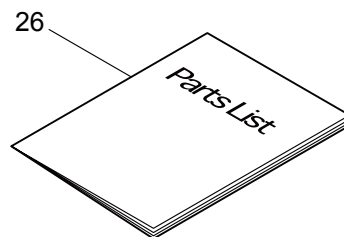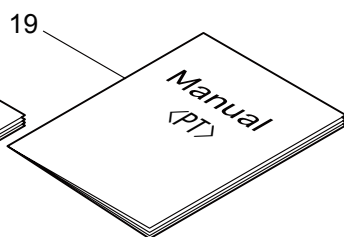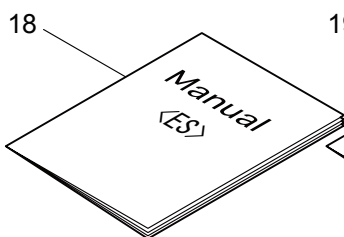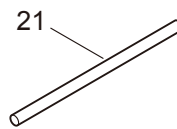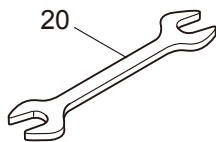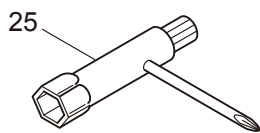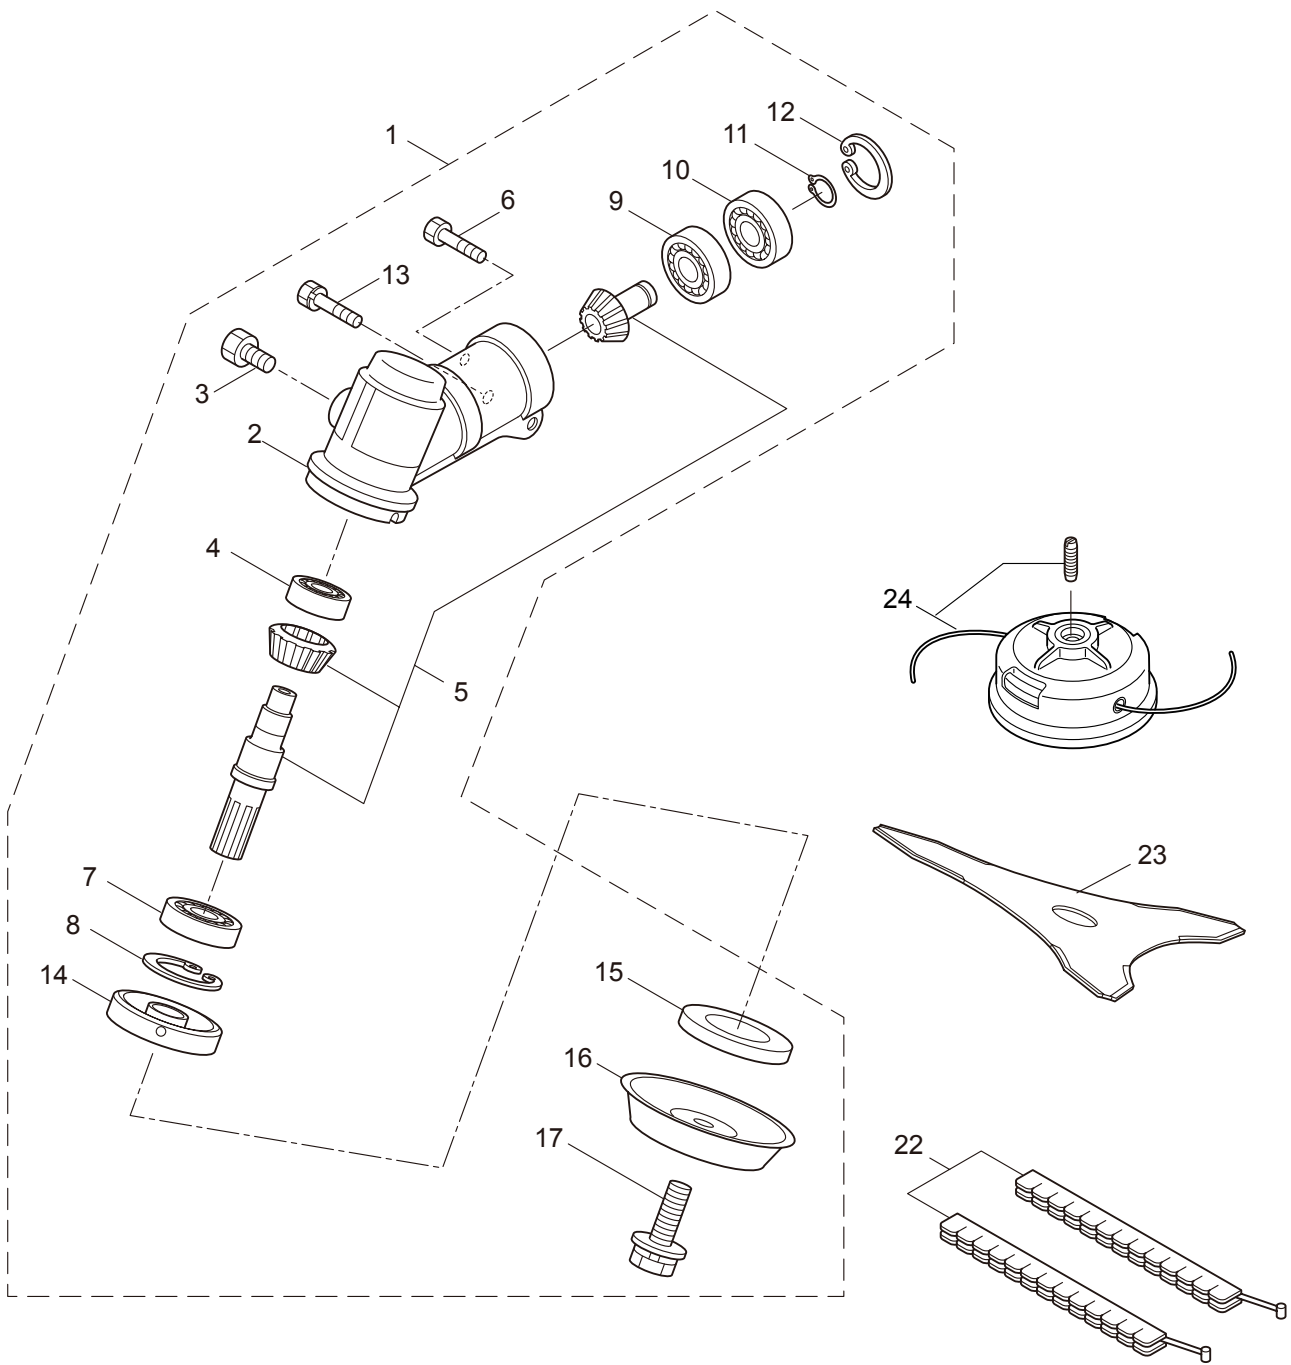


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	228403	Gearcase Ass'y	1	Incl.2-17
2-2	225960	Gearcase	1	
2-3	089101	Bolt	1	M8x10
2-4	227990	Bearing	1	#608
2-5	228416	Gear Set	1	
2-6	225896	Bolt	1	M5x10
2-7	227991	Bearing	1	#6001DDU
2-8	055185	Snap Ring	1	#28
2-9	227992	Bearing	1	#609
2-10	227993	Bearing	1	#609Z
2-11	228477	Snap Ring	1	#9
2-12	140270	Snap Ring	1	#24
2-13	092561	Bolt	1	M5x25
2-14	212986	Boss Adapter	1	
2-15	140275	Clamping Washer	1	
2-16	215547	Stabilizer	1	
2-17	215610	Bolt	1	M8x22,Counterclockwise
2-18	226057	Instruction Manual	1	ES
2-19	228412	Instruction Manual	1	PT
2-20	022865	Double-ended Wrench	1	8x10
2-21	210181	Lever Handle	1	3.5x170L
2-22	220534	Blade Cover	1	
2-23	227910	3-Teeth Blade	1	
2-24	229902	Nylon Head (L) 4	1	
2-25	210418	Box Spanner	1	13x19x(+)
2-26	522734	Parts List	1	BC320H-RS

3.BC320H-RS
ENGINE

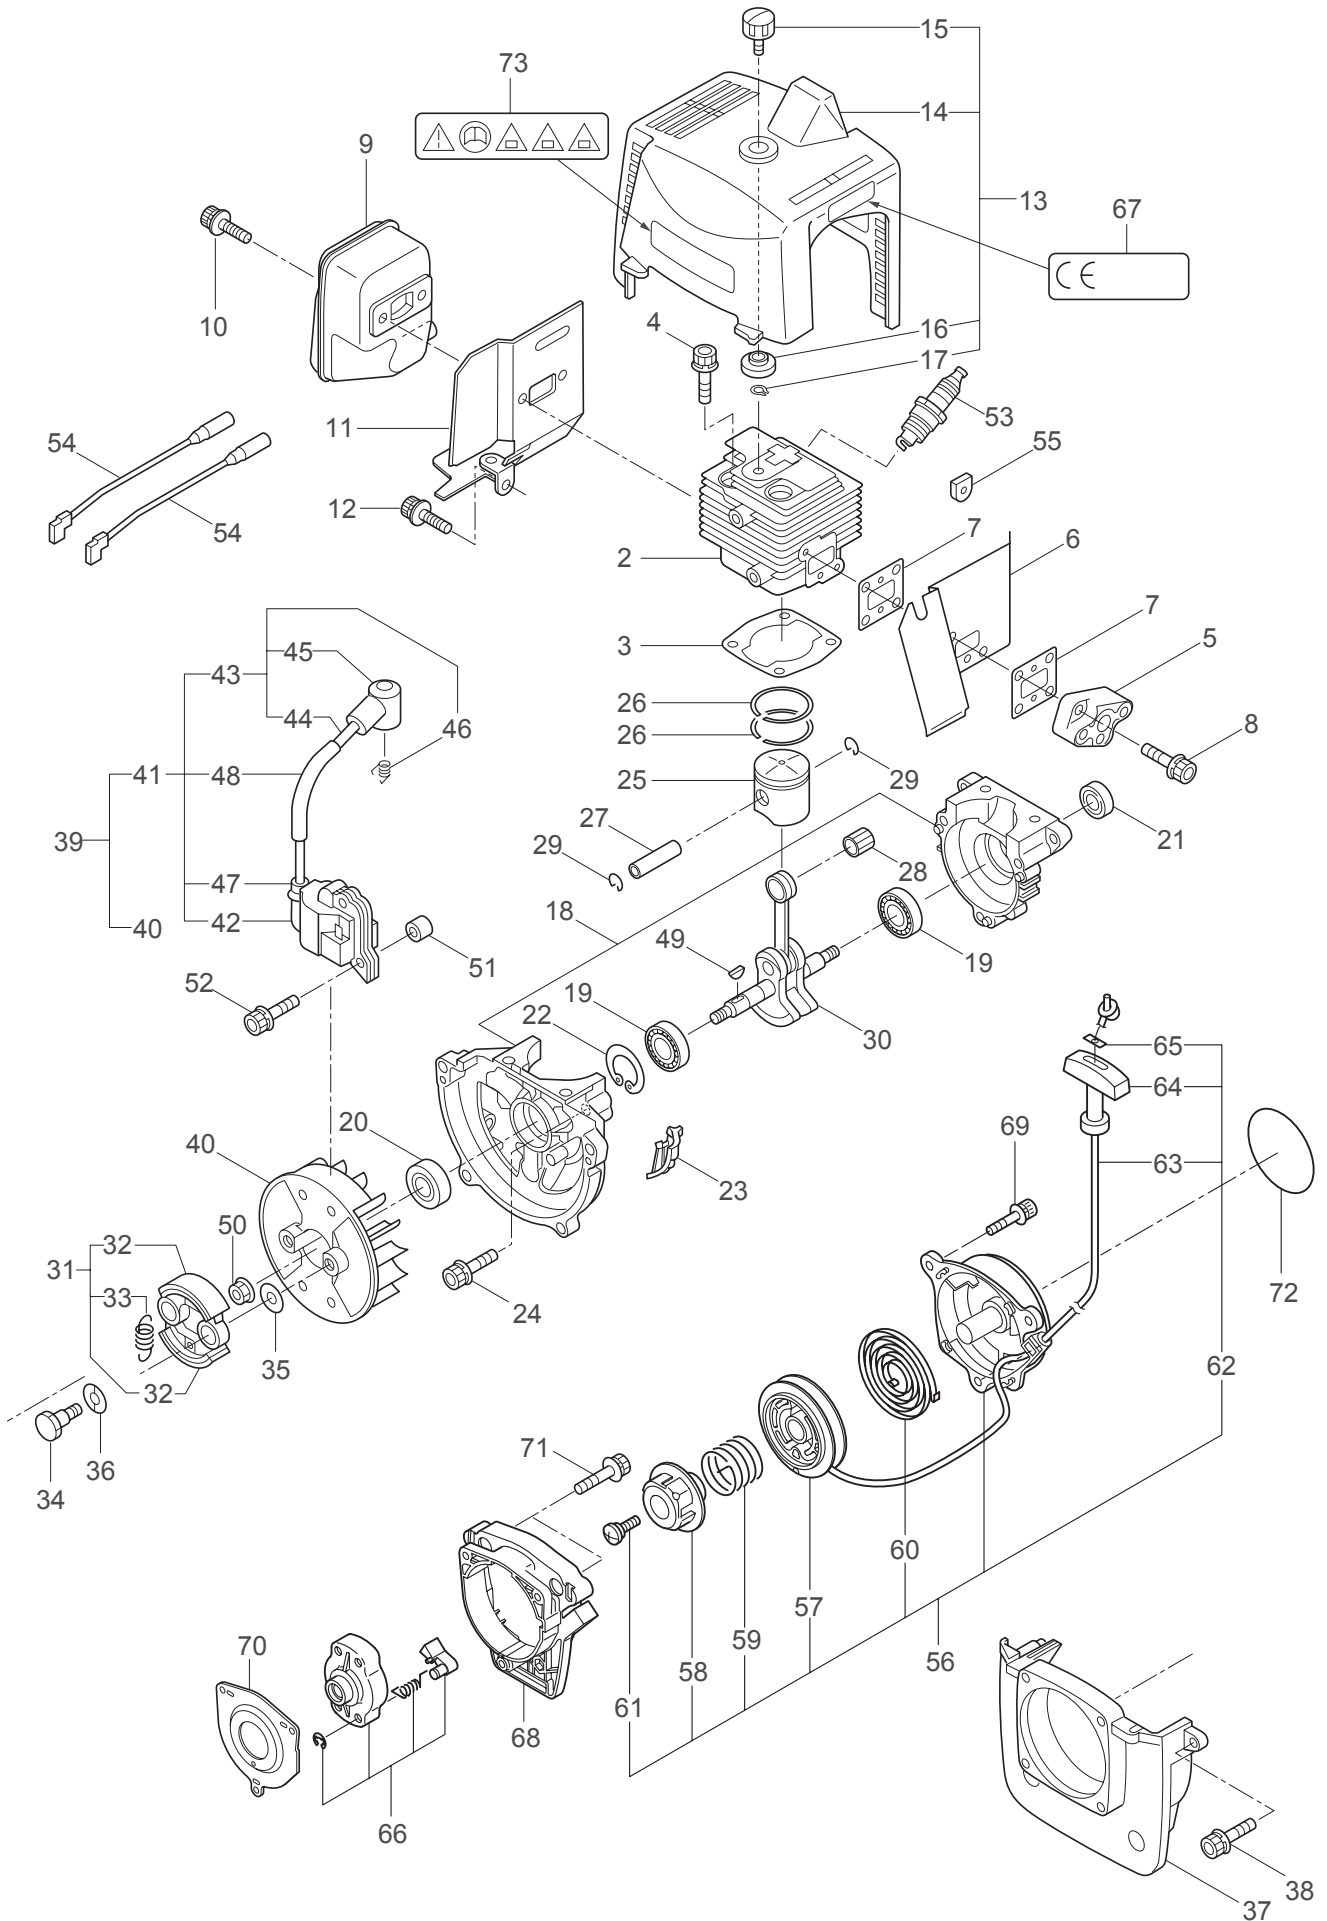


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	858435	Engine	1	AE320/153
3-2	261360	Cylinder	1	New gasket required
3-3	261528	Gasket	1	
3-4	261250	Cap Screw	4	M5x20
3-5	261938	Insulator	1	New gasket required
3-6	261364	Air Duct	1	
3-7	261171	Gasket	2	
3-8	265924	Cap Screw	2	M5x25
3-9	280619	Muffler	1	
3-10	266402	Cap Screw	2	M5x55
3-11	261833	Gasket	1	
3-12	261607	Cap Screw	1	M5x16
3-13	265304	Top Cover Ass'y	1	Incl.14-17
3-14	265305	Top Cover	1	
3-15	261018	Knob	1	
3-16	261020	Spacer	1	
3-17	261734	Snap Ring	1	#5
3-18	266636	Crankcase	1	
3-19	261384	Bearing	2	#6201C3
3-20	261385	Oil Seal	1	ISCD12327
3-21	261386	Oil Seal	1	ISCD12227
3-22	016732	Snap Ring	1	#32
3-23	265458	Screen	1	
3-24	261612	Cap Screw	3	M5x30
3-25	266980	Piston	1	
3-26	261390	Piston Ring	2	(2)Required
3-27	261555	Piston Pin	1	7x10x31.5L
3-28	261392	Bearing,Needle	1	KBK10x14x12.5x1
3-29	261393	Clip,Piston Pin	2	
3-30	261395	Crankshaft/Conn.Rod Ass'y	1	
3-31	264503	Clutch Ass'y	1	Incl.32,33
3-32	264504	Clutch Shoe	2	(2)Required
3-33	263614	Spring,Clutch	1	
3-34	264505	Bolt	2	
3-35	261189	Washer	2	6x16.5x1.2
3-36	261777	Wave Washer	2	
3-37	281325	Fan Cover	1	
3-38	261250	Cap Screw	4	M5x20
3-39	267391	Magneto Ass'y	1	Incl.40-48
3-40	261356	Rotor/Fan	1	
3-41	267400	Ignition Coil Ass'y	1	Incl.42-48
3-42	267401	Coil	1	
3-43	267403	Spark Plug Wire Ass'y	1	Incl.44-46
3-44	267404	Spark Plug Wire	1	
3-45	261074	Plug Boot	1	

3. BC320H-RS ENGINE

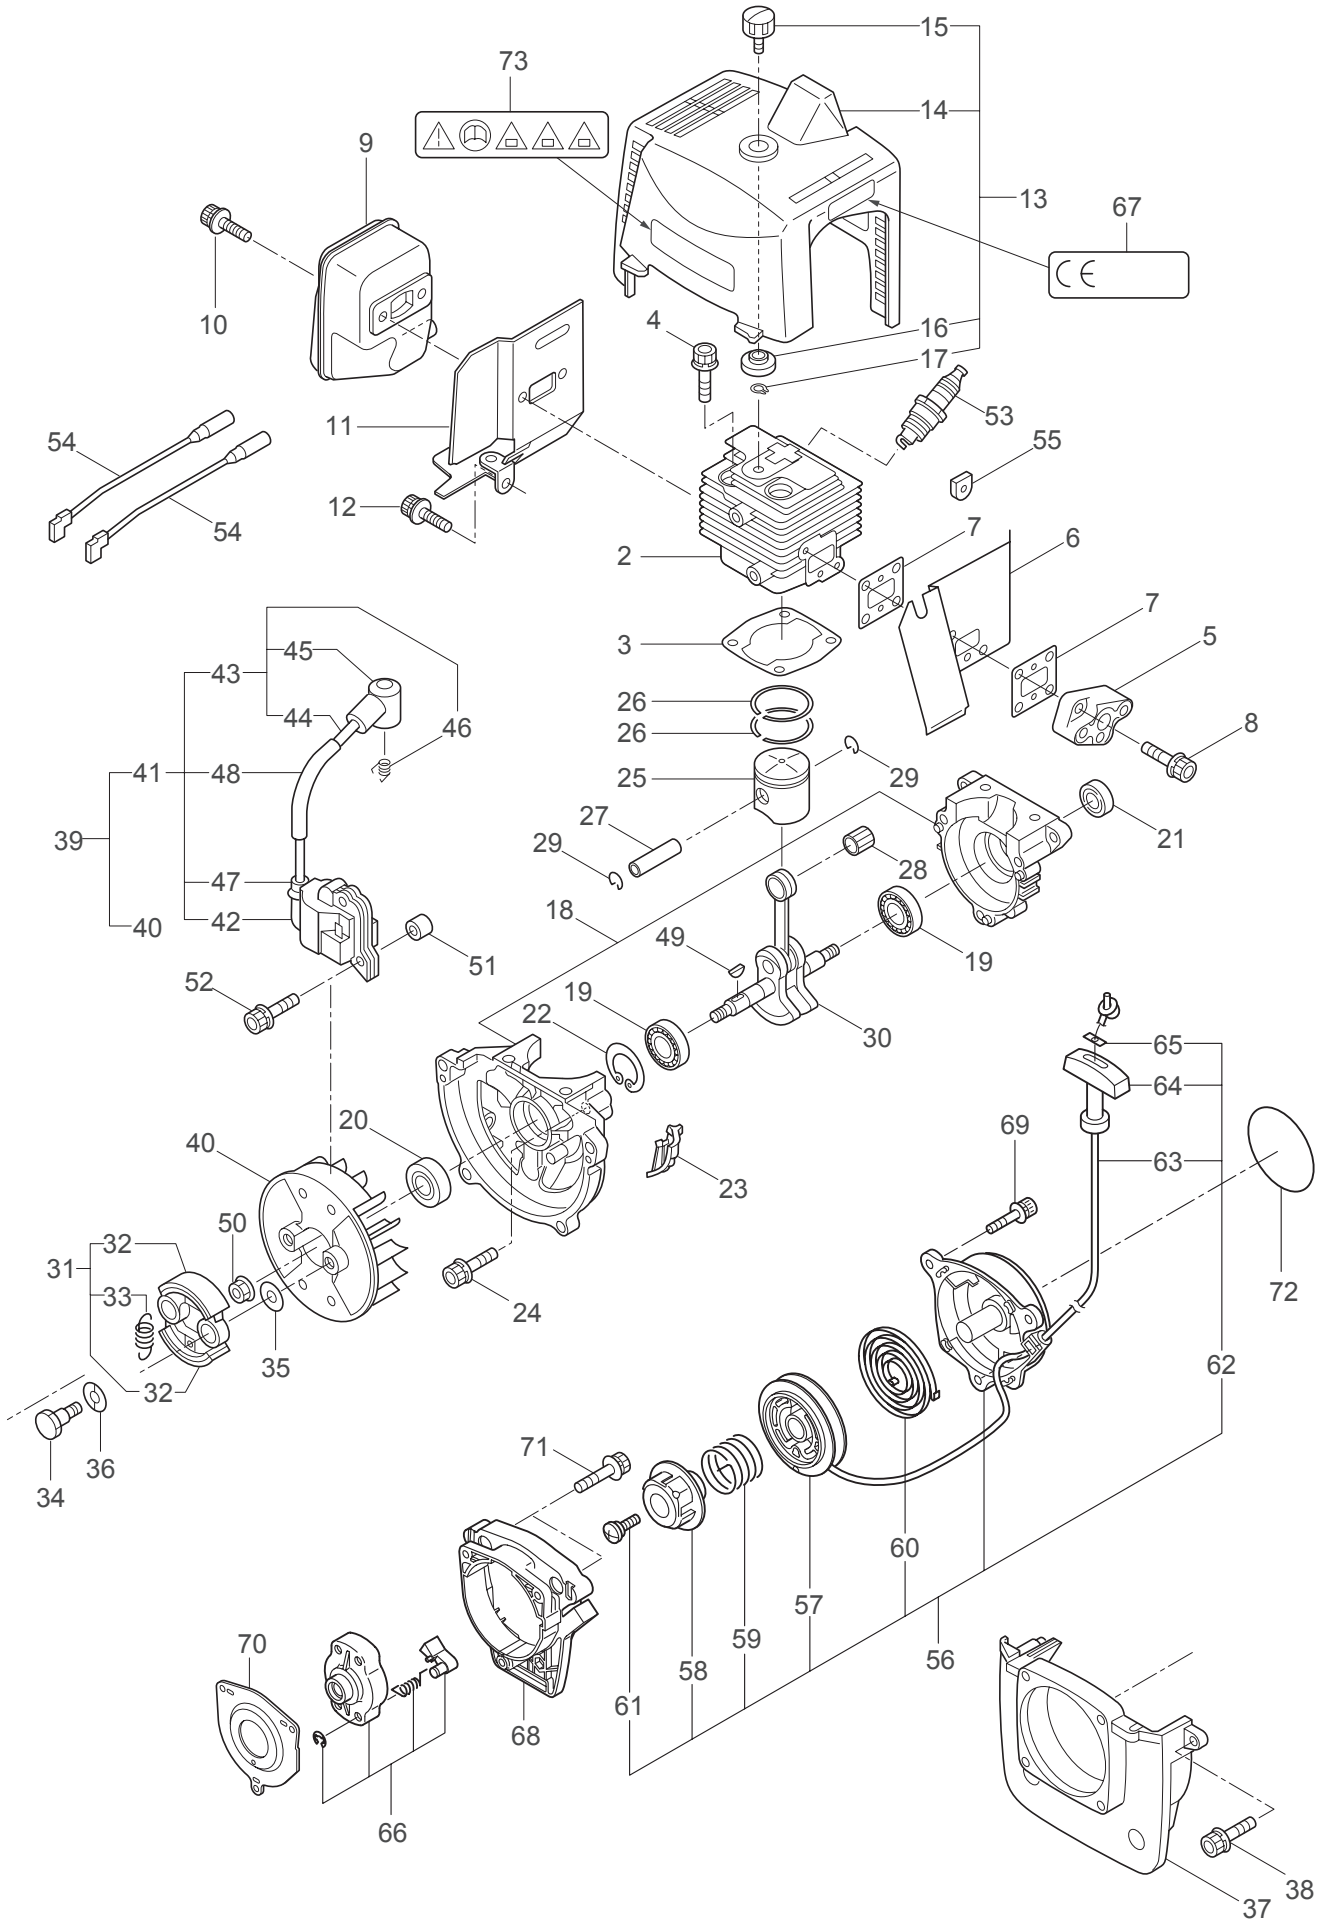

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	261075	Connector	1	
3-47	261072	Cap	1	
3-48	269418	Insulator	1	
3-49	261076	Woodruff Key	1	3x10
3-50	261417	Nut,Rotor	1	M8
3-51	280381	Spacer	2	
3-52	261256	Cap Screw	2	M4x25
3-53	262483	Spark Plug	1	NGK BPMR6Y
3-54	267492	Lead	2	130L
3-55	261202	Grommet	1	
3-56	283481	Starter Ass'y	1	Incl.57-65
3-57	283504	Reel	1	
3-58	283505	Cam Plate	1	
3-59	283506	Spring	1	
3-60	280931	Spiral Spring	1	
3-61	267213	Screw	1	
3-62	283578	Stater Rope Ass'y	1	Incl.63-65
3-63	283579	Stater Rope	1	
3-64	261725	Starter Grip	1	
3-65	283511	Rope Stopper	1	
3-66	283575	Starter Pawl Ass'y	1	
3-67	267561	Label	1	
3-68	280857	Adapter Ass'y	1	
3-69	283391	Cap Screw	3	M4x20
3-70	264999	Plate	1	
3-71	267290	Cap Screw	3	M5x20
3-72	280859	Label	1	REVERSE2/AE320
3-73	265694	Label	1	

4. BC320H-RS
 CARBURETOR, FUEL TANK

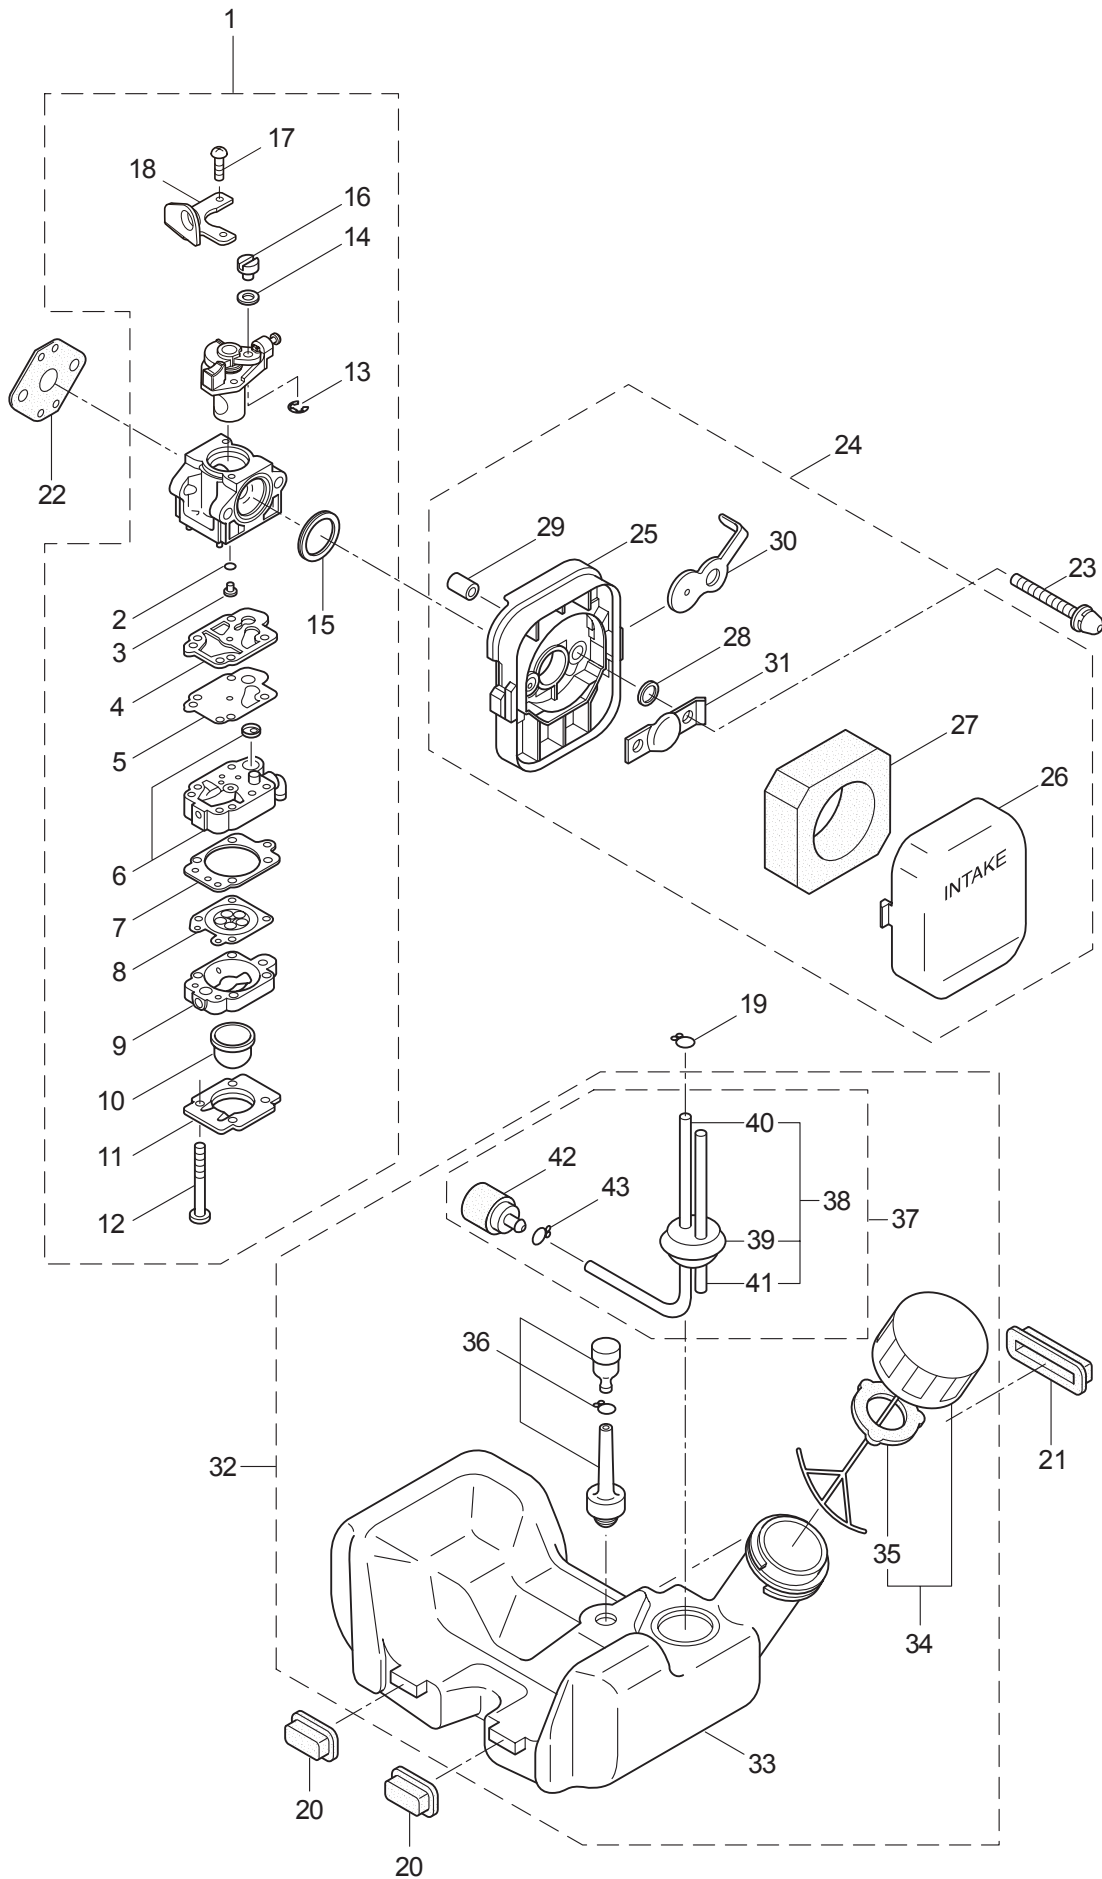

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	284085	Carburetor Ass'y	1	Incl.2-18
4-2	261871	O-Ring	1	
4-3	266175	Main Jet	1	#40.5
4-4	262995	Gasket	1	
4-5	262994	Diaphragm,Fuel Pump	1	
4-6	263739	Pump Body	1	
4-7	262993	Gasket	1	
4-8	261873	Diaphragm,Metering	1	
4-9	262991	Purge Body	1	
4-10	261874	Primer Bulb	1	
4-11	262992	Cover Plate	1	
4-12	262996	Screw	4	
4-13	261876	E-Ring	1	
4-14	264678	Washer	1	
4-15	261657	Packing	1	
4-16	261658	Swivel	1	
4-17	261875	Screw	2	
4-18	264677	Bracket	1	
4-19	261117	Clip	1	
4-20	261118	Pad	2	
4-21	261119	Pad	1	
4-22	261864	Gasket	1	
4-23	264016	Cap Screw	2	M5x60
4-24	262902	Air Filter Ass'y	1	Incl.25-31
4-25	263005	Housing	1	
4-26	262998	Cover	1	
4-27	263006	Element	1	
4-28	263000	Washer	1	
4-29	263001	Sleeve	2	
4-30	263007	Choke Valve	1	
4-31	263003	Plate	1	
4-32	284757	Fuel Tank Ass'y	1	Incl.33-43
4-33	284758	Fuel Tank	1	
4-34	262726	Fuel Tank Cap Ass'y	1	Incl.35
4-35	261105	Gasket	1	
4-36	261696	Breather Ass'y	1	
4-37	265752	Fuel Pipe Pick-up Ass'y	1	Incl.38-43
4-38	264031	Fuel Pipe Ass'y	1	Incl.39-41
4-39	261115	Grommet	1	
4-40	261690	Fuel Pipe	1	160L
4-41	263038	Return Pipe	1	3x6x85L
4-42	264653	Filter Ass'y	1	
4-43	261117	Clip	1	